

DUSTIN-MIZER

Assembly:

1. Insert handle & screw into hexagonal hole.
2. Attach tube to body using tube holes.
3. Attach deflector with thumb screw.

Instructions for use


1. Wear mask and follow dust product's safety instructions.
2. Fill hopper, point tube at desired area.
3. Turn handle at constant speed.

Maintenance:

After extensive use over time, the gear shafts may need to be lubricated.

1. Remove handle and gear cover.
2. Apply a soft, multi-purpose grease to each gearshaft. Do NOT use a spray. Re-assemble.

Parts & Accessories

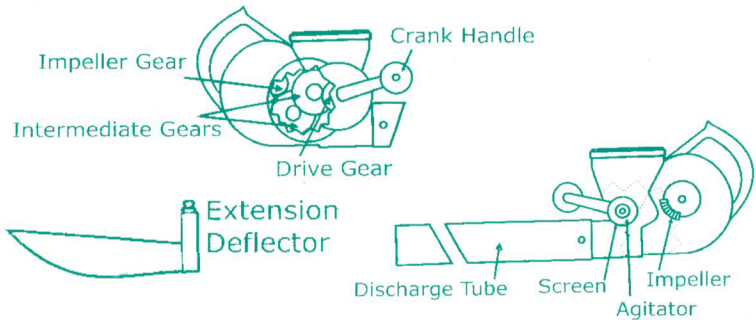

ORDER FROM: sales@earthduster.com

Item Description	Price (Includes (S&H))
Screen-Fine Mesh (#12)	\$5
Regular Screen Mesh (#10)	\$5
Screen—Large Mesh (#7).....	\$5
Gear Set: all 4 gears	\$12
Extension Deflector	\$10
Crank Handle	\$6
Regular 15.5 " Discharge Tube	\$8
Hopper Cover (Lid).....	\$6
48 inch Discharge Tube	\$15
Set of all three screens	\$12