
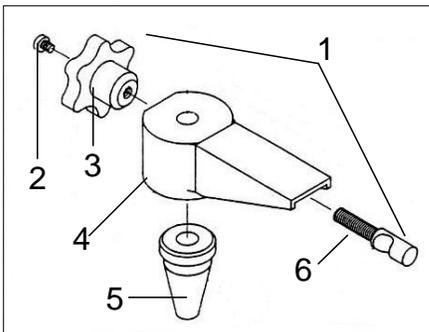


484/486 Versatool

<u>#</u>	<u>Part</u>	<u>Order #</u>	<u>Description</u>
1	1549	22071649	Valve assembly
2	1544	22071644	Valve body
3	VT-618	22059700	Spring rod
4	1-1964	33000090	O-Ring
5	VT-619	22059800	Valve rod
6	VT-621A	22060000	Seat gasket
7	VT-622A	22060100	Seat gasket holder
8	VT-611	22059000	Valve trigger
9	VT-609	22058800	Trigger pin
10	TN-45	22040500	Hex nut
11	1138	22071038	Spacer
12	VT-612	22059100	Rod screw
13	VT-615	22059400	Trigger lock
14	VT-616	22059500	Trigger lock spring
15	VT-617	22059600	Trigger lock screw
16		22070917	Adapter
17	1340	22071940	Pipe assembly
17a	Not Shown	22071950	Check valve assm
			Check valve fits between parts 17 & 18
18	1390	22071390	Tip (6 hole)
18	1542	22071642	Fan tip 2 gpm.
	Kit	22028910	Valve rebuild kit (Includes 4,6,7,10,11,14)

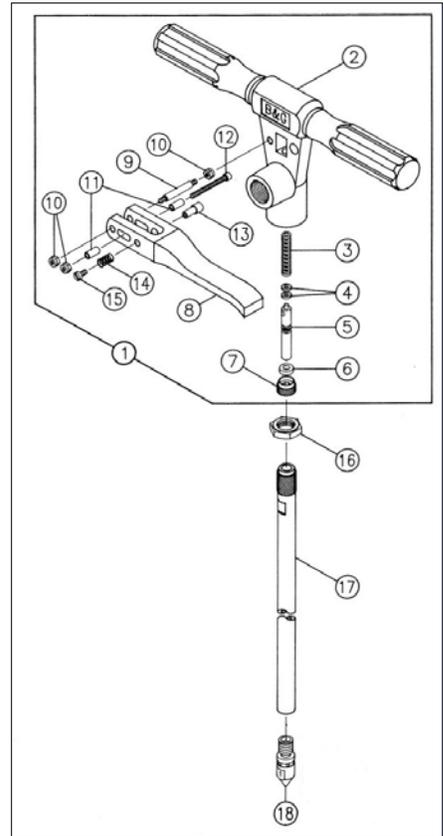

Adjustable Cone Seal

<u>#</u>	<u>Part</u>	<u>Order #</u>	<u>Description</u>
1	ACS	22071775	Adj. Cone Seal
2	1145	22071045	Retaining screw
3	1380	22071380	Lock knob
4	ACS30	22071776	Foot ram
5	ACS25	22071771	Cone seal
6	1381	22071381	Lock bolt

Rev 1/05