

# Installation Instructions


## Bird Spike 2000® Polycarbonate Bird Spike

Keep birds from landing and roosting in unwanted areas with Bird B Gone® patented Polycarbonate Bird Spike, Bird Spike 2000®. Bird Spike 2000® is made from a non-conductive U.V. protected polycarbonate plastic that is not affected by extreme temperatures and will not break! Bird Spike 2000® has an industry leading guarantee of 5-years and is available in 3", 5", and 7" widths.


***BIRD SPIKES ARE NOT RECOMMENDED IN AREAS WHERE BIRDS ARE NESTING.***

### APPLICATIONS


Bird Spike 2000® is a versatile system that can be easily glued, screwed, or tied down to various surfaces.

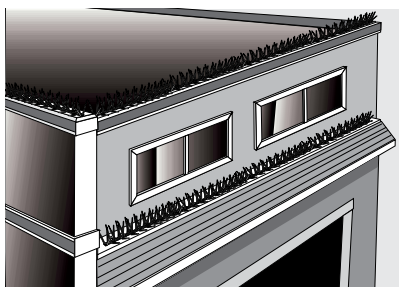


**Ledges:**  
Bird Spike 2000® prevents pest birds from congregating on ledges, sills, roof tops, etc. Installing Bird Spike 2000® will stop birds from landing, roosting, and creating unsightly messes and health problems.

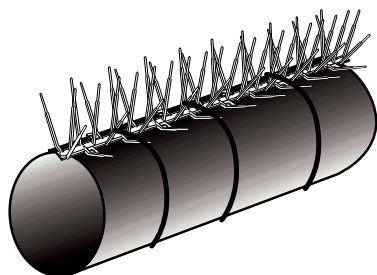

**Conduit:**  
Bird Spike 2000® can be attached to wires, conduit, gutters, and pipes by using common hose clamps, nylon ties, wire, or glue.

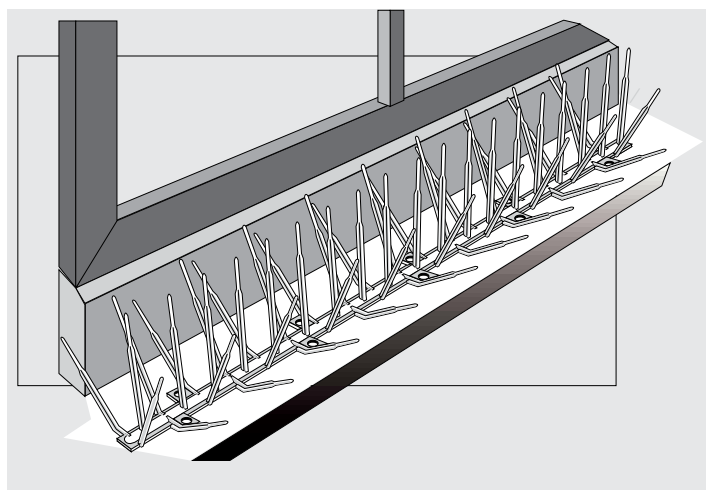

|                      |                                                                                                                |
|----------------------|----------------------------------------------------------------------------------------------------------------|
| Bird Species         | Pigeons, seagulls or larger birds                                                                              |
| Bird Pressure        | Light to Medium                                                                                                |
| Where to Use         | Roof peaks, ledges, beams, rooflines, parapet walls, eaves, I-beams, windowsills, light posts, signs, and more |
| Warranty             | 5-year manufacturer's warranty                                                                                 |
| Commercial Packaging | 50 ft. per box (25 – 2 ft. sections/box)<br>Each box measures 26" x 16" x 11"                                  |
| Colors               | Available in Clear, Tan, Grey, Black, Brown, Brick Red, White                                                  |

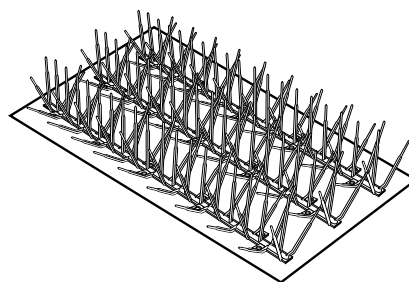

**Large Flat Surface:**  
Bird Spike 2000® can be installed in multiple rows for a wider area of coverage.

### Installation questions?

Call Bird•B•Gone® at 949.472.3122 or 800.392.6915

Email: [nobirds@birdbgone.com](mailto:nobirds@birdbgone.com)

**Watch our spike installation instruction video at:**  
[birdbgone.com/spikeinstall](http://birdbgone.com/spikeinstall)

### QUESTIONS?

Call Bird•B•Gone® at 949.472.3122 or 800.392.6915

Email: [nobirds@birdbgone.com](mailto:nobirds@birdbgone.com)



BIRDBGONE.COM | 800.392.6915

# Installation Instructions

## Bird Spike 2000® Polycarbonate Bird Spike

**CAUTION: READ AND FOLLOW ALL INSTRUCTIONS PRIOR TO INSTALLATION. SPIKES ARE SHARP. WEAR PROPER PERSONAL PROTECTION GEAR. KEEP OUT OF REACH OF CHILDREN AND PETS. DO NOT INSTALL WHERE HUMAN PHYSICAL CONTACT IS POSSIBLE. VISIT [BIRDBGONE.COM/SAFETY](http://BIRDBGONE.COM/SAFETY).**


### 1. DISINFECT AND CLEAN ALL SURFACE AREAS

Remove all debris including overhanging branches, leaves, nests, etc. Clean and disinfect area using hospital grade disinfectant. We recommend Microcide SQ™. Allow area to dry before installation. Visit [birdbgone.com/safety](http://birdbgone.com/safety) for additional information.

***DUE TO INFECTIOUS DISEASES ASSOCIATED WITH BIRD FECES, USE EXTREME CARE WHEN REMOVING NESTS AND BIRD DROPPINGS.***

### 2. DETERMINE THE METHOD OF ATTACHMENT

**For Concrete, Brick, Steel:** Adhere bird spike strips using outdoor construction-grade adhesive. Run a bead of adhesive along the glue trough on the underside of each bird spike strip. Press bird spike strip into place, allowing the adhesive to mushroom-up through the screw holes for more effective adhesion. For a list of recommended adhesives, visit our website at [birdbgone.com](http://birdbgone.com). One caulking tube of adhesive will adhere approximately 25 ft. of Bird Spike 2000®.

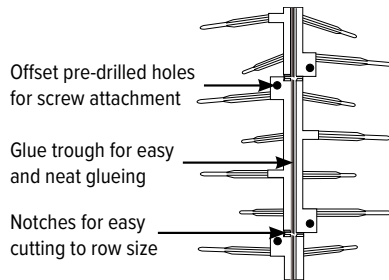


**For Wood:** Use wood screws to secure bird spike strips to wood surfaces. Following pre-drilled holes along the bird spike strip base, screw tightly into the end of each strip; place one wood screw at least every six inches along the strip base.

**For Pipes:** For pipes and other areas, secure bird spike strips with nylon ties by wrapping and securing the tie around the base of the bird spike strip.


**NOTE: WHENEVER POSSIBLE, BIRD SPIKE STRIPS SHOULD BE GLUED, SCREWED, OR TIED DOWN IN CONJUNCTION WITH AN OUTDOOR CONSTRUCTION-GRADE ADHESIVE.**

### 3. SPIKE PLACEMENT


- To prevent birds from nesting behind the spike, leave no more than 1" gap between the wall and the bird spike strip.
- To prevent birds from sitting on the ledge, leave a minimum of ½" overhang between the tip of the bird spike and front/leading edge.

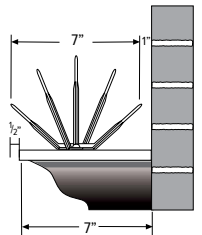

- When placing the next strip of spikes, be sure to place "End A" to "End B". "End A" starts with vertical center spike. "End B" starts with two middle spikes offset at an angle.

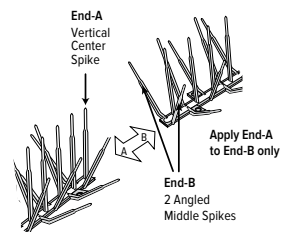

- Wider ledges, may require multiple rows of bird spike strips. Install bird spike strips with 1" overlap.

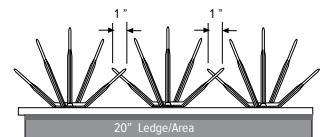

### 4. ADAPTING TO SIZE

- Bird Spike 2000®'s unique design has break-away points between each set of screw holes. Twist and bend the bird spike strip at these points to break-off sections as needed. Bird Spike 2000® can also be easily cut to desired size using tin snips or wire cutters.

### Installation questions?

Call Bird•B•Gone® at 949.472.3122 or 800.392.6915

Email: [nobirds@birdbgone.com](mailto:nobirds@birdbgone.com)

### QUESTIONS?

Call Bird•B•Gone® at 949.472.3122 or 800.392.6915

Email: [nobirds@birdbgone.com](mailto:nobirds@birdbgone.com)



[BIRDBGONE.COM](http://BIRDBGONE.COM) | 800.392.6915