

ASSEMBLING YOUR SPRAYER RACK


FLOWZONE[®]

PARTS

- | | |
|-----------------------------|-----------------------------|
| 1 Upright Steel Plate | 4 M8x1.25 Nuts & Bolts (8) |
| 2 Locking Pin & Spacing Jam | 5 Shoulder Bolts & Nuts (2) |
| 3 Steel Lid | 6 Base Steel Plate |

REQUIRED TOOLS

- | | |
|------------------|----------------|
| 1 13 mm Wrench | 3 17 mm Wrench |
| 2 4 mm Allen Key | |
- (Optional: Ratchet or driver 13mm socket)

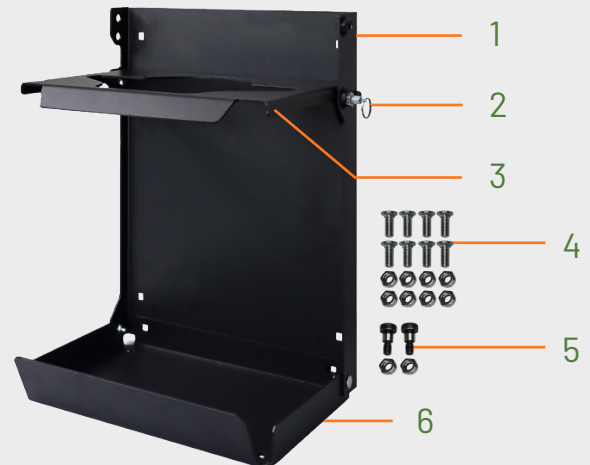

STEP 1:

Align the upright steel plate (1) with the base steel plate (6) of the rack using the square holes as a guide.

STEP 2:

Begin assembling by placing a M8x1.25 bolt (4) in both side square openings, then use your fingers & the 13 mm wrench to secure the nut to the bolt.

STEP 3:

Place a M8x1.25 (4) bolt through the back of the upright steel plate (1) opening, then use your finger to secure the nut to the bolt. Tighten with a wrench.

STEP 4:

Align the steel lid (3) with the upright steel plate (1) using the round holes as a guide.
Top Position = 4 Gallon
Bottom Position = 2.5 Gallon

STEP 5:

Thread a shoulder nut & bolt (5) into the top hole using a 4 mm Allen key. Repeat on the other side for a secure rotation.

STEP 6:

Thread the locking pin (2) and tighten the jam nut using the 17 mm wrench to secure the pin in place (2).