



Puff Duster Instruction Manual



Thank you for choosing Airofog USA puff duster, this professional tool is the latestest in Profesional dusting innovations using patented Airofog technology for application of dust and granular formulations of pesticides.

It's very versatile with its 3 configurations BASIC / STANDARD / PRO and specialized tips and extensions to assist treatment in hard-to reach area.

Safety Instructions

- Before use, check condition and proper function of the duster.
- ☑ Wear protective equipments directed by the insecticide label.
- ☑ Follow label instructions of insecticide dust.
- Direct dust or granular only at surfaces to be treated.
- Always keep the vial dry and clean.
- ☑ Don't expose the duster to solvents or extreme heat.
- □ Don't fill the vial with any liquid or gel.
- ☑ Wash hands after use.
- ☑ Only use original spare parts.

Care and Maintenance

- Remaining pesticide in the vial should be removed after using.
- Clean puff bulb and vial with soft brush, and wtih soap and water.
- Replace bulb or extention if cracked.

Getting Started

- Check all parts are in full working condition for proper application.
- ☑ The vial and extension tubes should be dry and clean.



Operation

- ☑ Remove the vial and fill it only 2/3 full with a insecticide dust.
- ☑ Screw on the vial and shake the duster gently.
- ☑ Squeeze the puffer to escape the dust from discharge tip.







Do not full fill the vial, to get a dust floating inside the vial.

Trouble Shooting.

Problem: Not enough dust or granular delivered

Solution: $\ensuremath{\mathbb{Z}}$ Shake the duster gently to loosen the content.


Add more dust or granular to the vial.Use cleaning rod if there is a blockage.

Problem: Dust leaking around cap or extension.

☑ Replace cap or extension if cracked.

Problem: Too much dust or granular delivered

2 Puff Duster: V2018-04

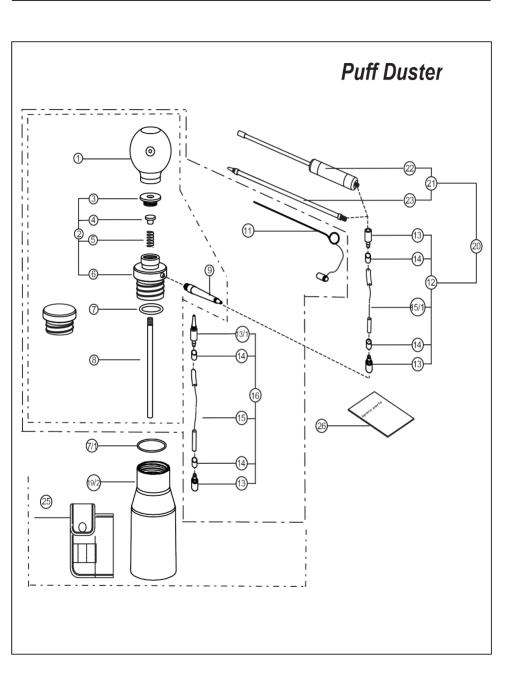



D	1	
Pos. no.	Part no.	Description
1	602-001-000	Puff Bulb
2	602-002-001	Check Valve Assembly (3,4,5,6), airofog
3	602-002-010	Check Valve Cover
4	602-002-020	Check Valve Seat
5	602-002-030	Check Valve Spring
6	602-002-041	Valve Body, airofog
7	602-002-050	O-Ring 22x2.5 Nitrile
7/1	412-017-000	O-Ring
8	602-003-000	Supply Tube
9	602-004-000	Discharge
11	602-006-010	Rod Assembly
12	602-005-000	Extension Hose cpl. (13x2,14x2,15)
13	602-005-010	Hose Connector
13/1	602-005-040	Nozzle Adapter
14	602-005-020	Hose Holder
15	602-005-030	Hose, 250mm
15/1	602-009-120	Hose 4ft length
16	602-009-000	Extension Tube with Nozzle (13/1,13,14x2,15/1)
19/2	602-007-020	Bottle
20	602-008-000	Extension Assembly (12, 21)
21	602-008-020	Extension Discharge Assembly (22, 23)
22	602-008-030	Extension Handle
23	602-008-040	Extension Lance
25	602-010-000	Carrying Pouch
26	602-602-000	Instruction Manual
	601-021-000	Belt (optional)

4 Puff Duster: V2018-04

AIROFOG USA



15074 Aviation Loop Drive Brooksville, FL 34604 USA

Tel: +1-352-593-5152

airofogusa@airofogusa.com